




Falcon II® Tractor Supply Program







Upper-Level Packing Instructions

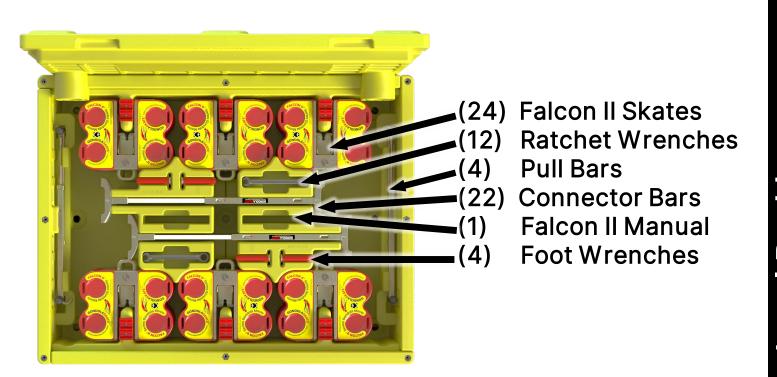


NOTE

 Connector Bars must be in the extended configuration. If Connector Bar is in the collapsed configuration, it will not be able to be properly stored.





Lower-Level Packing Instructions

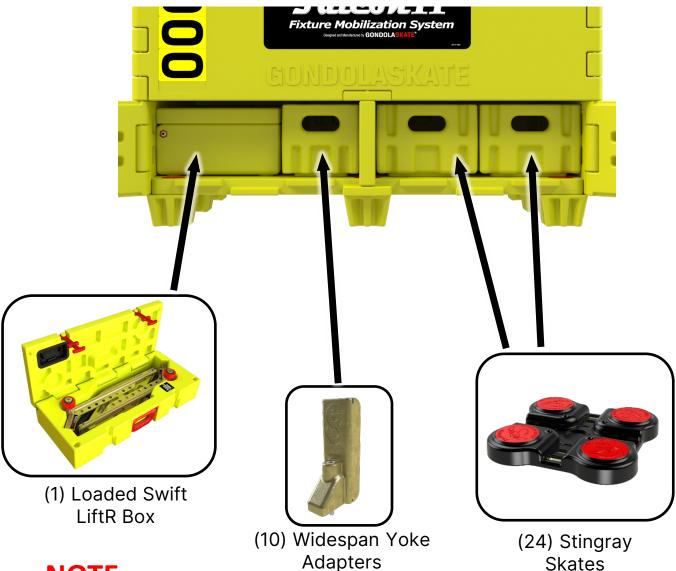

NOTE

- The smaller tub that holds the 10 Widespan Yoke Adapters must be stored next to the Loaded Swift LiftR Box
- The two larger tubs that hold 12 Stingray Skates each will always be stored next to each other

^{*}Packing of these components will be shown in following steps






Swift LiftR® Box Contents and Packing Instructions

Swift LiftR® Box Contents


Box Includes:

- 2 Swift LiftR handle assemblies
- 2 Swift LiftR lower assemblies
- 2 Chisel tip adapter
- 2 90° adapters

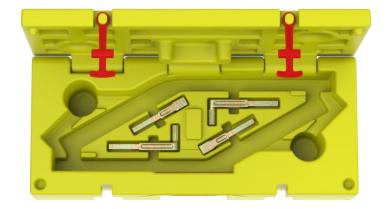




Insert 2 Chisel
 adapters and 2 90°
 adapters into respective slots

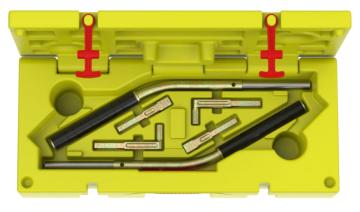

2. Insert **2 Swift LiftR** handles as pictured

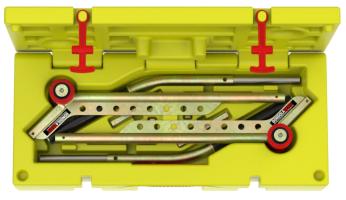

3. Insert **2 Swift LiftR lower assemblies** as pictured.





Lower-Level Tubs Packing Instructions





Stingray Skates should be stacked and stored as pictured above. The first layer of skates should be placed with the wheels facing up, and the second layer should be placed with the wheels facing down.

Repeat for next two layers.

Each Larger Tub stores 12 Stingray Skates in this kit.



10 Widespan Yokes are stored in the smaller tub. They should be neatly placed into the tub similarly to the picture above.